

Реле безопасности SR3A

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59


Киргизия +996(312)96-26-47

эл.почта: zrm@nt-rt.ru || сайт: <https://zander.nt-rt.ru>

Safety Relay SR3A

Operating Instructions



Correct Use



SR3A is a safety switching device specially designed for sensors with antivalent logic (normally open / normally closed combination). In case of danger, the moving parts of a machine or system can be quickly and safely shut down via three safe relay contacts.

The SR3A is used for monitoring safety gates and safety grids on machines and systems in accordance with EN ISO 13849-1, IEC 62061 and in systems in accordance with IEC 61508 and IEC 61511.

- 3 redundant safety contacts
1 auxiliary contact
- Connection of:
 - Reed contact sensors
 - Safety door switches
 - Safety position switcheseach with NO / NC combination.
- Dual channel control
- Feedback loop for external contactors or extension modules
- Cyclical monitoring of the output contacts
- LED indicators for power and status



- Automatic or monitored, manual start
- Short-circuit monitoring and ground fault monitoring
- Up to category 4, PL e, SIL 3

Function

The safety emergency stop relay SR3A is designed for the safe isolation of safety circuits in accordance with EN 60204-1 and thus performs the safety-related stop function up to PL e / SIL 3 in accordance with EN ISO 13849-1 / IEC 61508. If the emergency stop circuit (e.g. safety door or emergency stop button) is closed, the machine can be enabled via the SR3A. When the safety function is requested (e.g. safety door open), the enable current paths of the SR3A are opened immediately and thus safely switch off the machine. The redundant use of forcibly guided relays ensures that a single fault within the device does not lead to the loss of the safety function and that this is detected by cyclical self-monitoring

the next time the safety function is requested.

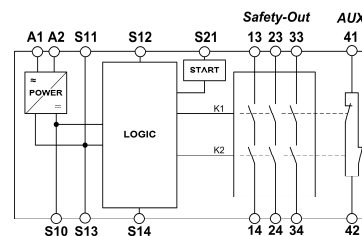


Fig. 1 Block diagram SR3A

Installation

As per EN 60204-1, the device is intended for installation in control cabinets with a minimum degree of protection of IP54. The following should be noted:

- Mounting on 35 mm rail according to EN 60715 TH35
- Ensure sufficient heat dissipation in the control cabinet
- With the AC 115 V / 230 V version, a minimum distance of 10 mm to adjacent devices must be maintained

Note: Spacer from ZANDER AACHEN (Art. No. 472596) for defined distances - See section Accessories.

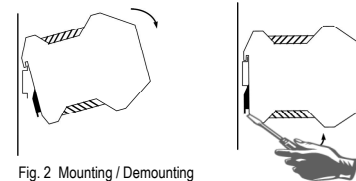


Fig. 2 Mounting / Demounting


Safety Precautions



- Installation and commissioning of the device must be performed **only by authorized personnel** and who has read and understood this operating instructions.
- Observe the country-specific regulations when installing the device.
- The electrical connection of the device is only allowed to be made with the device isolated.
- The wiring of the device must comply with the instructions in this operating instructions, otherwise there is a risk that the safety function will be lost.
- It is not allowed to open the device, tamper with the device or bypass the safety devices.
- The contact protection and the insulation of the supply cables must be designed for the highest voltage to the device.
- It is not allowed to open the device, tamper with the device or bypass the safety devices.
- All relevant safety regulations and standards are to be observed.
- The overall concept of the control system in which the device is incorporated must be validated by the user.
- Failure to observe the safety regulations can result in death, serious injury and serious damage.
- Note down the version of the product (see label "Ver.") and check it prior to every commissioning of a new device. If the version has changed, the overall concept of the control system in which the device is incorporated must be validated again by the user.
- The year of manufacture can be found on the type label on the device. It is located at the end of the line of the voltage specification, below the ID number.

Electrical Connection

- When using the 24V version, a safety transformer according to EN 61558-2-6 or a power supply unit with electrical isolation from the mains must be connected
- Observe the instructions in the section "Tech. Data"
- A suitable protective circuit for inductive loads (e.g. free-wheeling diode) must be provided
- If the device does not function after commissioning, it must be returned to the manufacturer unopened. Opening the device will void the warranty
- The auxiliary contact 41-42 may not be used as a safety contact



- A1: Power supply
- A2: Power supply
- S10: PE connection for AC 115V/230V versions
- S11, S13: DC 24 V Control voltage
- S21: Control line start
- S12: Control line channel 1
- S14: Control line channel 2
- K2-14: Safety contact 1
- 23-24: Safety contact 2
- 33-34: Safety contact 3
- 41-42: Auxiliary contact

Safety Relay SR3A

Operating Instructions

Applications

Depending on the application the device must be wired as shown in Fig. 1 to Fig. 8.

Safety Circuit

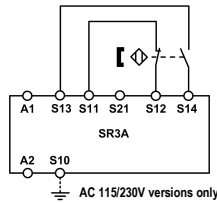


Fig. 1:
Two-channel safety door monitoring via sensor with antivalent reed contact outputs, with short circuit and ground fault monitoring.
(Category 4, up to PL e / SIL 3)

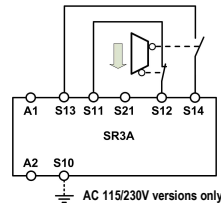


Fig. 2:
Dual channel safety guard monitoring with short circuit and ground fault monitoring.
(Category 4, up to PL e / SIL 3)

Notice:

- In order to activate earth fault monitoring, S10 must be connected to PE (protective earth) on the AC 115/230 V devices
- For AC/DC 24 V devices, the earth connection of the power supply unit must be on the secondary side
- The start circuit must be wired corresponding to the application according to Fig. 3 or Fig. 4.

Start Behaviour





Fig. 3:
Monitored manual start.
It is monitored that the start button has been opened before the safety switch is closed.
Prerequisite:
Power supply may not be interrupted.



Warning:
Safety contacts will be activated immediately at power-on.

Fig. 4:
Automatic start.
Maximum allowable delay when closing the safety switch at S12 and opening at S14:
S12 before S14: 300ms
S14 before S12: no limit

Feedback Loop




Fig. 5:
Feedback loop for monitored manual start.
The feedback loop monitors contactors or expansion modules.




Fig. 6:
Feedback loop for automatic start.
The feedback loop monitors contactors or expansion modules.

Power Supply and Safety Contacts

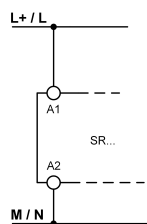


Fig. 7:
Connection of the power supply at the terminals A1 und A2.

(Power supply corresponding to "Technical Data")

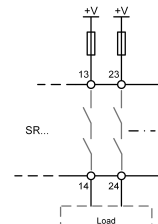


Fig. 8:
Connection of loads to be switched to the safety contacts.

(Sample contact configuration. Maybe different depending on device type.
Switching voltages "+V". according to technical data)

Commissioning Procedure



Advice: Follow the guidelines in "Electrical Connection" during the start-up.

1. Safety circuit:

Connect the safety inputs according to one of the wiring diagrams in "Applications" (Fig. 1 or Fig. 2).

2. Choose start mode:

Wire the start circuit according to the examples in Fig. 3 or 4 to set the starting behavior.

Warning:

If "Automatic start" is set, bear in mind that the safety contacts will switch immediately after the power supply is connected. If "Monitored manual start" is set, the start button must be opened after wiring.

3. Feedback loop:

If your application provides for external contactors or expansion modules, connect them to the device according to the examples in Fig. 5 or 6.

4. Power supply:

Connect the power supply to A1 and A2 (Fig. 7).

Caution:

Carry out the wiring only in de-energized state.

5. Starting the device:

Switch on the operating voltage.

Warning:

If the "Automatic start" starting behaviour is set, the safety contacts will close immediately.

If the "Monitored manual start" starting behaviour is set, close the start button to close the safety contacts.

LEDs **Pwr**, **K1** and **K2** are lit.

6. Triggering safety function:

Deactivate the safety inputs by actuating the connected safety switch. The safety contacts will open immediately. The LEDs K1 and K2 go out.

7. Reactivation:

Activate the safety inputs. If "Automatic start" is selected, the safety contacts will close immediately.

If the start behaviour "Monitored manual start" is set, close the start button to activate the safety contacts.

Safety Relay SR3A

Operating Instructions

Check and Maintenance

The following checks are regularly required to ensure proper and continuous functioning:

- Check the switching function.
- Check for signs of manipulation and safety function bypassing.
- Check if the device is mounted and connected securely.
- Check for soiling.

Check if the safety device is working properly, in particular:

- Every time after initial commissioning.
- Every time after replacing a component.
- After every fault in the safety circuit.

According to CNB / M / 11.050, a request for the safety function is recommended at the following intervals:

- Once a month for applications up to PL e with Cat. 3 or Cat. 4 or SIL CL3, SIL 3 with HFT = 1
- Once a year for applications up to PL d with Cat. 3 or SIL CL 2, SIL 2 with HFT = 1

What to do in Case of a Fault?

Device does not switch on:

- Check the wiring by comparing it to the wiring diagrams.
- Check the safety switch for correct function and adjustment.
- Check whether the safety inputs are activated.
- Check whether the start button (manual start) is closed.
- Check the operating voltage at A1 and A2.
- Is the feedback loop closed?

Device cannot be switched on after a safety request:

- Emergency stop circuit was closed again.
- Was the start button opened before closing of the emergency stop circuit (manual start)?
- Is the feedback loop closed?

If the fault still exists, perform the steps listed under "Commissioning Procedure". If these steps do not remedy the fault either, return the device to the manufacturer.

Opening the device is not permitted and will void the warranty.

Technical Data

In compliance with	EN 60204-1; EN ISO 13849-1; EN IEC 62061; IEC 61508, Parts 1-2 and 4-7; IEC 61511-1		
Operating voltage	AC 230 V, AC 115 V 50-60 Hz; AC/DC 24 V; AC: 50-60 Hz		
Permissible deviation	+ / - 10 %		
Power consumption	DC 24 V 2.3 W	AC 24 V 4.5 VA	AC 115 V / 230 V 6.9 VA
Control current S11–S12 / S13-S14	< 60 mA / < 15 mA		
Safety contact configuration	3 NO		
Auxiliary contact configuration	1 NC		
Max. switching voltage	AC 250 V		
Contact rating of safety contacts (13-14, 23-24, 33-34), 6 switching cycles per minute	AC: 250 V, 2000 VA, 8 A for resistive load 250 V, 3 A for AC-15 DC: 30 V, 320 W, 8 A for resistive load 24 V, 3 A for DC-13 UL: B300 / R300 Max. total current 15 A (13-14, 23-24, 33-34) *)		
Contact rating of auxiliary contact (41-42)	AC: 250 V, 500 VA, 2 A for AC-12 DC: 30 V, 80 W, 2 A for resistive load		
Minimum contact load	5 V, 10 mA		
External fuses	NO: 10 A gG, NC: 6 A gG		
Max. switch-on delay	< 50 ms		
Max. delay on safety request	Via S11-S12 or S13-S14: < 20 ms; via A1/A2: < 50 ms		
Recovery time	< 500 ms		
Wire width	0.14 - 2.5 mm ²		
Tightening moment (Min. / Max.)	0.5 Nm / 0.6 Nm		
Max. length of control lines	1000 m at 0.75 mm ²		
Contact material	AgSnO ₂		
Contact service life	mech. approx. 1 x 10 ⁷		
Rated impulse withstand voltage	2.5 kV (control voltage / contacts)		
Dielectric strength	4 kV (EN 60664-1)		
Rated insulation voltage	250 V		
Protection	IP20		
Ambient temperature	AC/DC 24V: -15 °C to +55 °C *) AC 115V/230V: -15 °C to +55 °C (see total current limit curve)		
Degree of pollution / Overvoltage category	2 / 3 (EN 60664-1)		
Max. altitude	≤ 2000 m (above sea level)		
Weight	approx. 230 g		
Mounting	DIN rail according to EN 60715 TH35		

*) If several SR3A under load are closely connected, the max. total current at an ambient temperature of T=20 °C is 9 A; at T=30 °C is 3 A; at T=40 °C is 1 A. If these currents are exceeded, a gap of 5 mm must be maintained between the devices.

Safety Relay SR3A

Operating Instructions

Disclaimer and warranty

If the above mentioned conditions for appropriate use are not complied with or if the safety instructions are not followed or if any maintenance operations are not carried out as required, this shall lead to an exclusion of liability and loss of warranty.

ATTENTION!

We would like to point out that it is the full responsibility of the operator to ensure a plant availability. Using the SR3A, a safety emergency stop relay according to


- EN ISO 13849-1
- EN IEC 62061
- IEC 61508
- IEC 61511-1

is used, which will be brought into the safe state when the safety function is requested.

This means that the connected load is switched off as soon as a request from connected sensor elements or diagnostic measures detects a dangerous state, e.g. caused by a component fault.

Since process-related applications in particular have high demands on availability, limited availability can also have significant consequences. It is therefore recommended to stock a second unit to avoid long downtimes in such a case. These are recommendations of the manufacturer, the evaluation of the importance of the plant availability is the sole responsibility of the operator.


Total Current Limit Curve

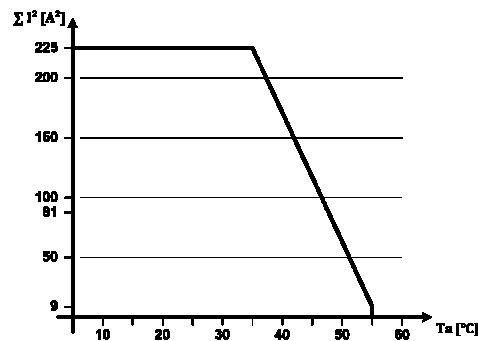

Total current limit curve depending on the ambient temperature for 115 V / 230 V variants with 10 mm gap between the devices.

$$\text{Total current: } \Sigma I^2 = (I_1 + I_2 + I_3)^2$$

Dimension Drawing

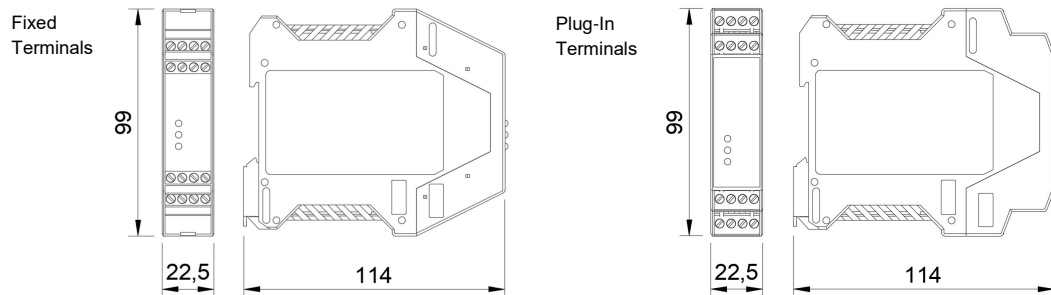

Note: Actual number of front LEDs may differ from the number shown in the drawing, depending on the variant.

Variants

Order No. 472260	SR3A, AC 230 V (50-60 Hz),	fixed screw terminals
Order No. 472261	SR3A, AC 115 V (50-60 Hz),	fixed screw terminals
Order No. 472262	SR3A, AC/DC 24 V (AC: 50-60 Hz),	fixed screw terminals
Order No. 474260	SR3A, AC 230 V (50-60 Hz),	incl. plug-in screw terminals
Order No. 474261	SR3A, AC 115 V (50-60 Hz),	incl. plug-in screw terminals
Order No. 474262	SR3A, AC/DC 24 V (AC: 50-60 Hz),	incl. plug-in screw terminals
Order No. 475260	SR3A, AC 230 V (50-60 Hz),	incl. push-in twin spring connector
Order No. 475261	SR3A, AC 115 V (50-60 Hz),	incl. push-in twin spring connector
Order No. 475262	SR3A, AC/DC 24 V (AC: 50-60 Hz),	incl. push-in twin spring connector

Accessories

Order No. 472592	EKLS4,	set of plug-in screw terminals
Order No. 472595	EKLZ4,	set of push-in twin spring connector
Order No. 472596	Spacer Electric Cabinet	rail spacer 5mm, PU = 12 pcs

Safety Relay SR3A

Operating Instructions

Safety Characteristics

Safety characteristics according to EN ISO 13849-1

Load per contact	≤ 0.1 A	≤ 1 A	≤ 2 A
Max. duration of use [Years]	20	20	20
Category	4	4	4
PL	e	e	e
PFHd [1/h]	1.2E-08	1.2E-08	1.2E-08
nop [Cycles / year] - AC-15 / DC-13	≤ 55,000 / ≤ 350,000	≤ 42,500 / ≤ 100,000	≤ 42,500 / ≤ 15,000

Safety characteristics according to IEC 61508 - High Demand

Conditions: Days of operation/year: 365; Hours/Day: 24; Switching-Cycle/Hour: 1; Maximum load AC-15 / DC-13

Max. duration of use [Years]	20
Proof-Test-Intervall [Years]	20
PFH [1/h]	9.86E-11
SIL	3

Safety characteristics for alternate 1oo1 structure for process industry - High Demand

Conditions: Days of operation/year: 365; Hours/Day: 24; Switching-Cycle/Hour: 1; Maximum load AC-15 / DC-13

Device type	A
HFT	0
SIL	3
SFF [%]	99.93
λ_{SD} [FIT]	0
λ_{SU} [FIT]	121.58
λ_{DD} [FIT]	9.86
λ_{DU} [FIT]	0.10
PFH [1/h]	9.86E-11

Safety characteristics according to IEC 61508 - Low Demand

Conditions: Maximum load AC-15 / DC-13

Max. duration of use [Years]	20
Proof-Test-Intervall [Years]	9
PFD _{AVG}	1.04E-04
SIL	3

Safety characteristics for alternate 1oo1 structure for process industry - Low Demand

Conditions: Maximum load AC-15 / DC-13

Device type	A
HFT	0
SIL	3
SFF [%]	97.34
λ_{SD} [FIT]	0
λ_{SU} [FIT]	121.43
λ_{DD} [FIT]	0
λ_{DU} [FIT]	3.32
PFD _{avg} (e.g. for T = 1 year)	1.46E-05

Proof-Test

In order to check the proper function of the device, the following steps have to be carried out

- Demand the safety function by opening the safety circuit. Check that the relay contact (13-14; 23-24; 33-34) opened by activation of the safety function.
 - Close the safety circuit and start the device again. Check that the safety contacts (13-14; 23-24; 33-34) closed again.
- If the device doesn't switch on again, the proof-test failed.

ATTENTION:

If the proof-test fails, the device must be replaced. Otherwise there is a risk of loss of functional safety.



По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: zrm@nt-rt.ru || сайт: <https://zander.nt-rt.ru>